LED OUTDOOR WALL FIXTURE Model: 4405BK-E26

120V 60Hz input

READ AND FOLLOW SAFETY INFORMATION

WARNING – Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

• All electrial connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

ASSEMBLY & INSTALLATION (see FIG.1)

- 1. Thread the 8-32 HEX NUT (9) onto the FIXTURE SCREW (8), and screw the FIXTURE SCREW (8) into the MOUNTING BRACKET (3), without tightening the HEX NUT (9).
- 2. Pull the power supply wires out from the OUTLET BOX (1) and mount the MOUNTING BRACKET (3) to the OUTLET BOX (1), using MOUNTING SCREWS (2).
- 3. See Fig. 2 to make electrical connections by using wire nut (7).
- 4. After wires are connected, tuck them carefully inside the outlet box.
- 5. Place Back plate (13) over the OUTLET BOX (1), and make sure FIXTURE SCREW (8) feed through the two holes on the canopy.
- 6. Thread 2 CAP NUT(14) onto the fixture screws (8), tighten them until Back plate (13) is securely mounted.
- 7 . Installation complete, restore power at the circuit breaker and turn light switch on to activate this fixture.
- 8. After installing the fixture, caulk upper 2/3 of wire connection enclosure to mounting surface. Leave bottom 1/3 un-caulked for drainage of any water that might leak into the enclosure. A good example is a clear silicone rubber sealant for exterior use.
- 9. Install the included LED bulbs(16) into each medium-base socket Relamping-DO NOT exceed watts MAX as indicated on label.



• This outdoor wall light fixture has been permanently installed a Photocell(15) switch, photocell turns lantern ON at dusk and automatically turns OFF at dawn. Please don't cover the photocell switch at anytime.









