


TUFFTRAXX™ GRIP KIT

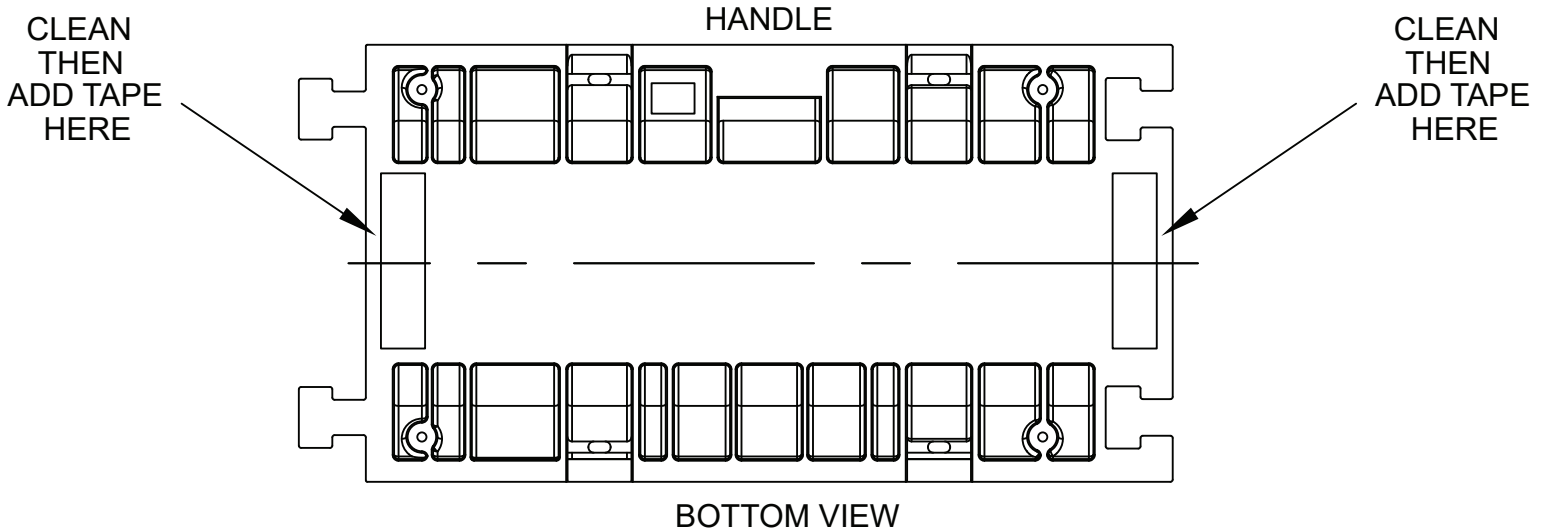

Application Instructions

1. Clean any dirt off the back of your Tufftraxx™, in the areas shown, with Isopropyl alcohol or other similar solvent that leaves no residue.
2. Peel the adhesive backer off the grit tape, one piece at a time, and apply superglue to the sticky side of the tape, as evenly as possible. Apply 1 tube per strip. The tape is to be affixed to the Tufftraxx™ with BOTH the self adhesive AND the superglue, to successfully bond to the Tufftraxx™. Some tape trimming may be required, depending on Tufftraxx™ model. Trim grit tape strips with knife or scissors
3. Position the two grit tape strips as shown. Allow glue to dry a few minutes before use.

WARNING: The grit tape is intended for use on unfinished floor surfaces such as cement or asphalt. DO NOT use this Grip Kit on finished floors, such as gymnasium floors or similar, or abrasive/scratching damage will result.