SINGLE BASKET TROFFER

Spectrum 930 Installation Guide

/ WARNING

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- All wiring connections should be capped with UL approved wire connectors.


- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Risk of burn. Disconnect power and allow fixture to cool befor changing bulb or handing fixture.

NOTICE: Green ground screw provided in proper location.Do not relocate. **NOTICE:** Minimum 90° supply conductors.

NOTICE: Specifications and dimensions subject to change without notice.

NOTICE: Suitable for Dry or Damp location, Type IC.

Installation Instructions

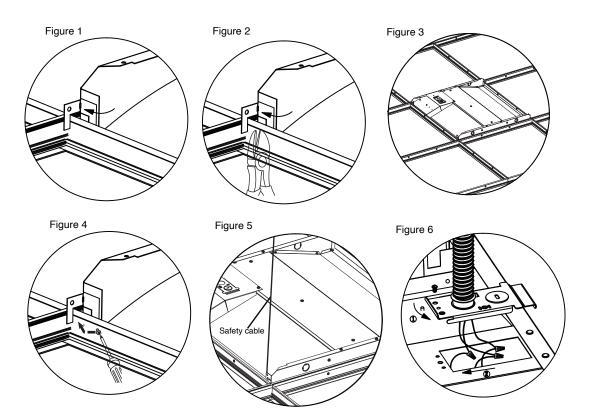

Always turn off the power supply from main circuit breaker first!

General Wiring Diagram





PAGE 1 OF 3





PAGE 2 OF 3


Installation Instructions (cont.)

Chain Suspended Mounting

- Step 1: Bend out mounting tab 90 degrees on each corner.
- Step 2: Use side cutters to adjust each tab to height of T-grid.
- Step 3: Lay fixture into T-gird grid.
- Step 4: Bend tabs flush against T-grid in order to clear corner for ceiling tile.
- **Step 5:** Use a #8×1/4" sheet metal screw to fasten fixture to T-grid and use a hanger wire to tie off appropriately in accordance with local building codes(screws and hanger wires supplied by others).
- **Step 6:** Ensure that the wiring of the last fixture in the row is properly terminated. Then make all electrical connections to the fixture. Attach the wiring access cover plate.

Surface Mount Dimensions


2' x 2' Panel

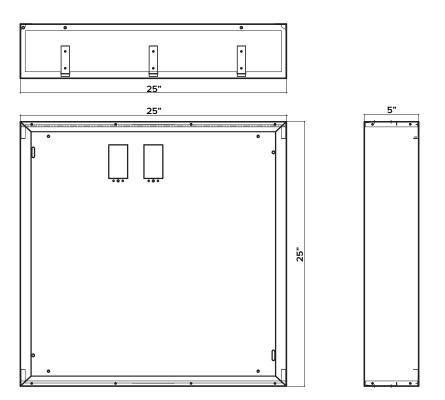




Surface Mount Dimensions (cont.)

2' x 4' Panel

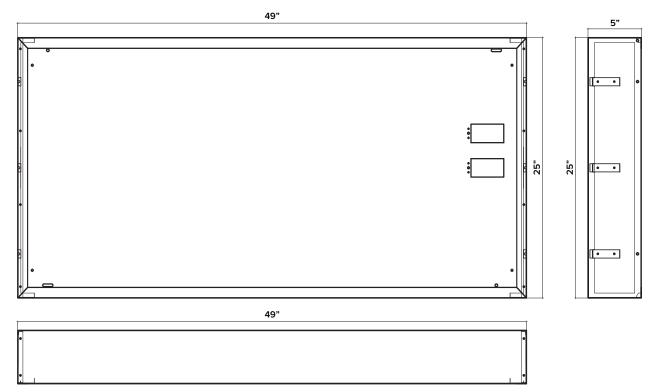

1' x 4' Panel

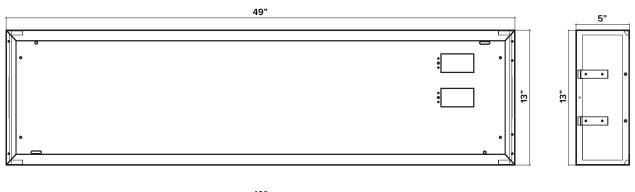



PAGE 3 OF 3

SPECTRUM SERIES