




**Questions?**


For customer service please call us at 1-888-743-5766  
Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday

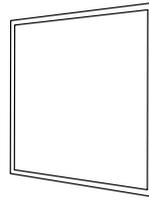


**Panel Surface Mount Kit**

1x4 ft. | 2x2 ft. | 2x4 ft.


**RECESSED FRAME INSTALLATION**

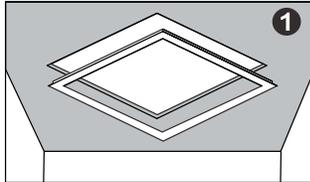

1. Put the frame into the hole

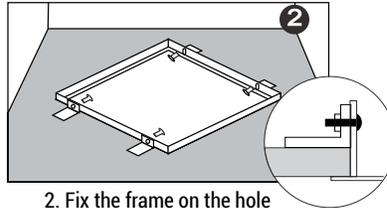


2. Fix the frame on the hole

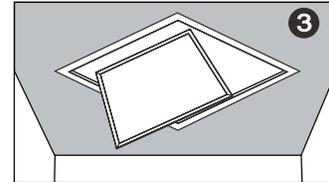


3. Put the panel into the recessed mounted frame

T-bar clips should be bent out to provide additional safety and support. Additional support means may be required by local or national codes. Hole provided may be used to further secure fixture from above.


**NOTES:**  
- SECURE TO GRID PER STATE AND LOCAL CODES.  
- CEILING GRID MUST ADEQUATELY SUPPORT WEIGHT OF FIXTURE.

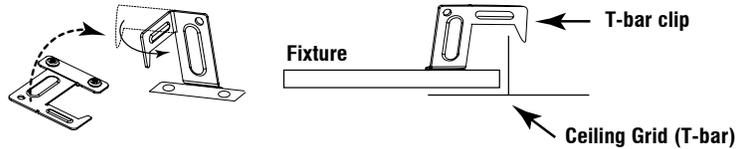


**SURFACED FRAME INSTALLATION**

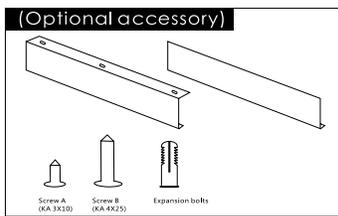


Screw A (KA 3X10) Screw B (KA 4X25) Expansion bolts

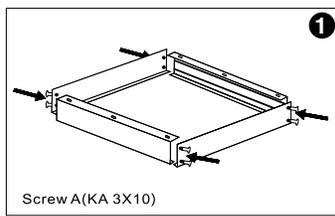


1. Assemble the four frames with Screw A to the whole square/rectangle

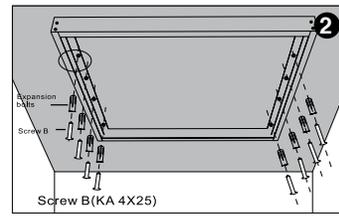


2. Fix the square/rectangle frames to the ceiling with Screw B

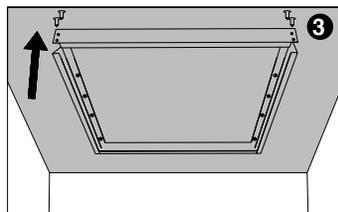

3. Demount one Frame

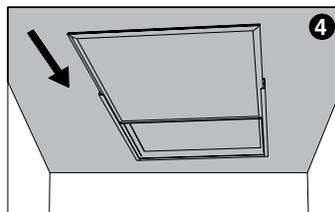

4. Put the panel into the frame square

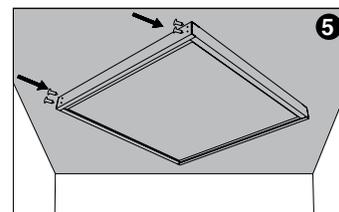

5. Fix the last frame with screw A

**SUSPENSION - EPN-SUSMK**

