



Instructions for Pressure bracket and Torsion Spring Installation

Models 80/2676, 80/2709

Step 1: Retrofit with torsion spring or pressure bracket.

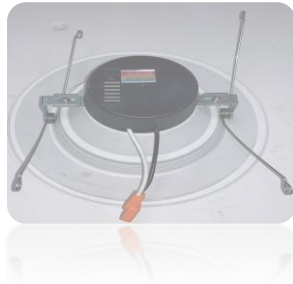

Step 2: using a Philips screwdriver unscrew Left torsion spring or pressure bracket.

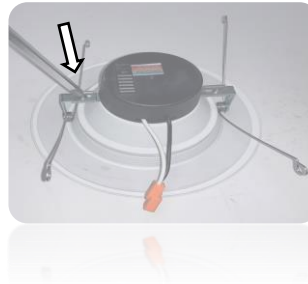

Step 3: unscrew right torsion spring or pressure bracket.



Step 4: install the left pressure bracket or torsion spring and set to fit your can size.



Step 5: Install the right pressure bracket or torsion spring and set to fit your can size.



Step 6: Installation of pressure bracket or torsion spring is complete.

